



Step 1 -Charging

1

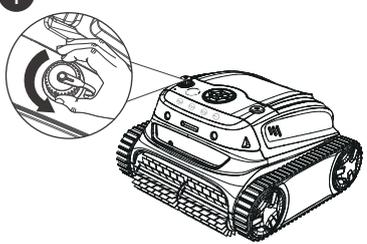

- Unscrew protective cap, and ensure charging port dry.


3

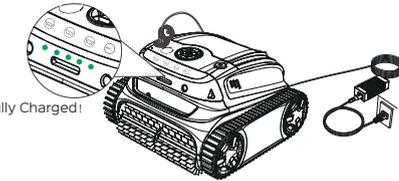

Fully Charged!

- Fully charge your device before first use.

2

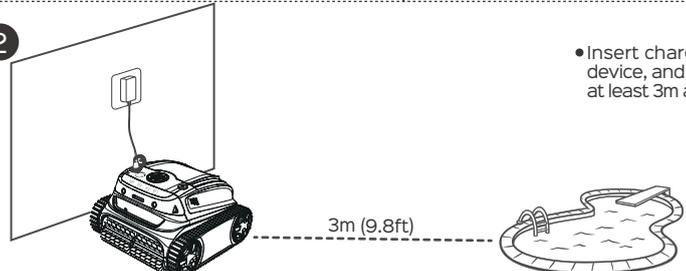


3m (9.8ft)

- Insert charger cable into the device, and keep your cleaner at least 3m away from the pool.


Step 2 -Starting the device

4

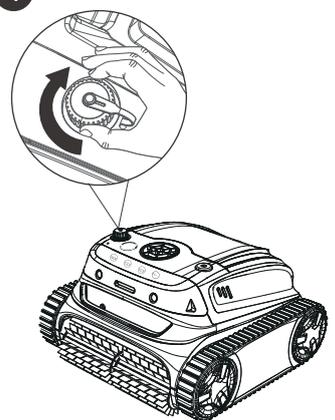

- Screw protective cap back.

5

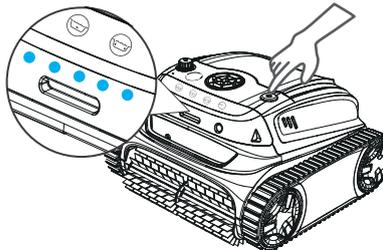

- Press on/off button, and the LED turns solid blue.
- Put the device into the pool within 3 min., otherwise, it will power off.
- The default cleaning mode is wall then floor.

Step 3 -WYBOT App setting& mode selection (If you do not need presetting, you may skip this step)

6




- Please download WYBOT and set your cleaning mode in advance.
- Register your account as per App direction.
- Bind your device as per App direction.

7



- Enable your mobile phone Bluetooth.
- Keep your device out of water and within the range of Bluetooth.
- Your device will turn solid purple after a successful connection.


8

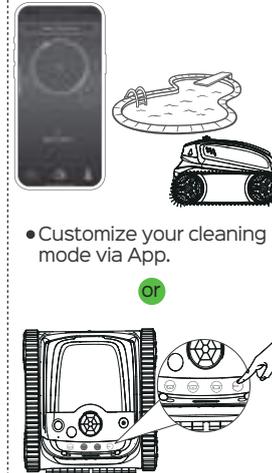

- Customize your cleaning mode via App.
- Select a mode via the toggle.
- Either way is workable.


Step 4 -Submerging the device

9

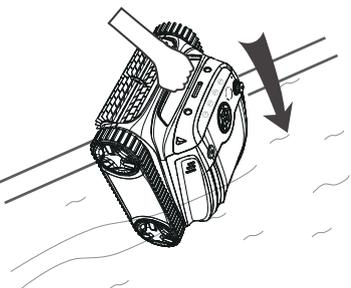

- Submerge the device into the pool gently.


10

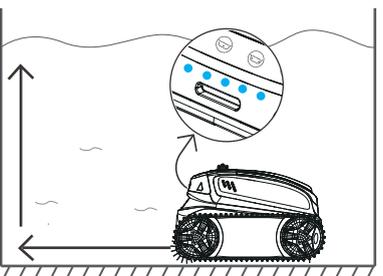

- Wait for the device auto-calibration for 20 seconds.
- LED turns flashing blue and start to clean.

Step 5 -Removal from the pool

11

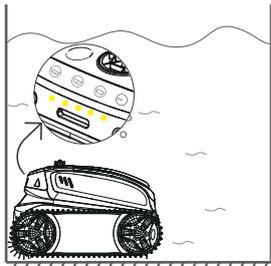


- Auto park by the wall when completing cleaning.

12



- Insert the included hook into a standard pool pole.


13

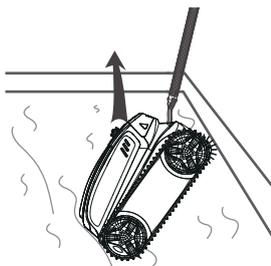

- Hook it out of the pool.


Step 6 -Cleaning the filter

14

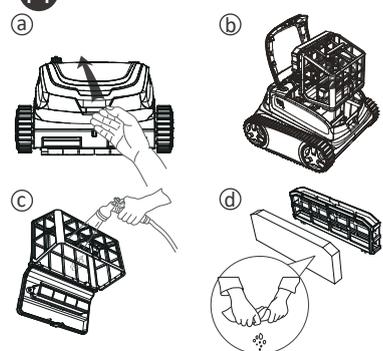

- Cotton foam is an auxiliary filter to help trap the fine dirty particles. Recommend to use it for floor cleaning. Please do not install it when the pool water is heavy dusty, it may influence the operation of the cleaner.
- You should clean the filter after use. Insufficient cleaning may influence pool cleaning effect.

15

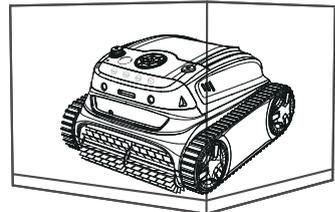

- Store the cleaner in a ventilated place and keep it out of direct sunlight or inclement weather.
- Charge the device at least every 3 months to maintain battery performance during the offseason.